

RONDO MUTT FRONT FENDER MOUNTING GUIDE

1. REMOVE THE OLD STOCK FENDER

First take the front wheel off. Then unbolt the screw on the back of the fork crown and two retaining fork stays mount bolts on the sides of the fork. Now you can easily remove the old fender.

2. PREPARE NEW FENDER AND ALL NECESSARY PARTS

Ensure all parts are delivered with the new fender. This is extremely important in order to mount the new part in proper and safe way.




3. ASSEMBLE THE BRACKET RAIL

First put the two fender stays mounts onto the rail. Put the flat brown washer on each bolt to be between the fender and the bolt head.



4. MOUNT THE RAIL TO THE FENDER

Temporarily mount the rail in fender place using two 4mm bolts, washers, and nuts supplied with the kit. Remember to put the washers between underside of the fender and nut. No need to tighten the bolts yet, just snug the rail into place.

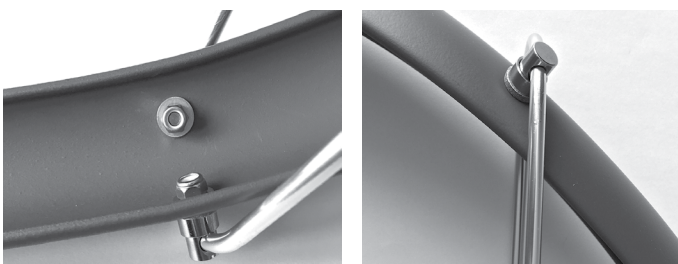


5. SCREW THE FENDER TO THE FORK CROWN

Use the bolt supplied to tighten the fender to the fork crown.



6. MOUNT THE BRACKET RAILS TO THE FORK

Now you can mount the rails to the fork directly. Use two fork stays mounts to bolt the end of the rails to the inner side of the fork. Use 4mm allen key to tighten.

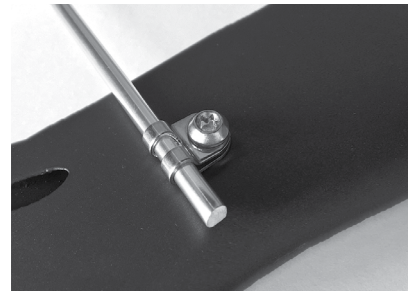

7. SET THE POSITION OF THE FENDER

By moving the fender up and down set the right position of the fender. Then fasten all nuts and bolts.



8. PUT THE WHEEL ON.

Make sure there is sufficient clearance between the tire and the fender.

For queries please contact: info@rondo.cc